

Transformer Breather

Refill Instructions

1. Remove red cap from transformer breather
2. Remove o-ring and gauze filter
3. Fill breather with silica gel using a funnel
4. Place gauze filter in breather neck
5. Place o-ring over gauze filter
6. Screw on red cap until unit is ready to be installed on the transformer

